

Benchtop Centrifuge

GLO GT416

User's Manual



Glotech Co., Ltd

Contents







1. GLO GT416G Performance
2. Precautions
3. Technical Specifications
4. Installation
 - 4-1. Delivery Checklist
 - 4-2. Unpacking the Instrument
 - 4-3. Installation Place
 - 4-4. Supply the Power
 - 4-5. On/off and the door open
 - 4-6. Rotor coupling and disassembling
5. Operation
 - 5-1. Control Panel
 - 5-2. Function Description
 - 5-3. Operation Sequence
 - 5-4. Miscellaneous Functions
6. Maintenance
7. Trouble Shooting
8. Ordering Information

1. Performance

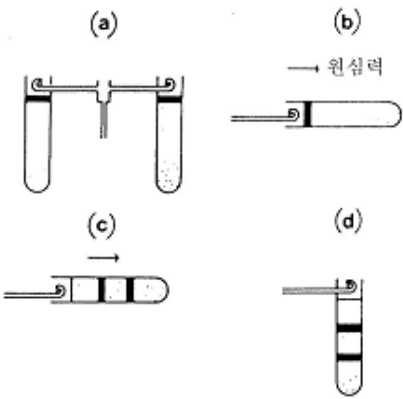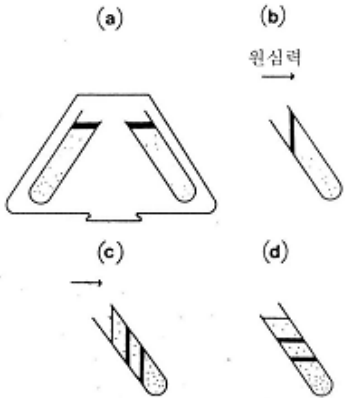

- Compact design with automatic door release
- Max. 4,000 rpm/2,826 g, Time setting to 99 min 59 sec or continuous
- Rapid acceleration and deceleration
- “SOFT” start/stop function for gentle acceleration/deceleration
- Digital display of speed and remaining time
- Automatic RPM/RCF conversion
- Automatic recognition and alarms for imbalance, over-speed and over-heat
- Program memory for up to 10
- Unique air-flow cooling internal design
- Three layered safe door with auto-lock function
- Complete with autoclavable, fixed angle rotor (16 x 15 ml tubes) or swing-out rotor (4 wings or 6 wings) with buckets (50 ml, 15 ml, 2 x 15 ml, etc)
- A range of adaptors being available for both rotors for tubes from 3 ml to 15 ml

1-1. Delivery Checklist

	GLO GT416G	Existing Type
Comparison of centrifugation	 <p>- Centrifugal separation of blood in the direction of action</p>	 <p>- Blood seokim After centrifugation</p>
Rotor	 <p>Swing-out Rotor</p>	 <p>Fixed angle Rotor</p>
Product		

2. Precautions

- ✓ The instrument must be installed on a flat, stable, horizontal and solid surface.
- ✓ Before operating the instrument, check if the rotor and the rotor lid are securely fastened.
- ✓ Do not move the instrument when it is not completely stopped.
- ✓ Operate with a stable & appropriate power inlet.
- ✓ Do not place dangerous materials within 30cm distance around the instrument.
- ✓ Only use rotors from Glotech Co., Ltd. with appropriate tubes for centrifugation.
- ✓ Do not use hazardous, inflammable or radioactive materials as samples.
- ✓ When it is necessary to use toxic or radioactive materials or pathogenic micro-organisms which belong to the Risk Group II of WHO: "Laboratory Bio- safety Manual," follows national regulations.
- ✓ Use the emergency door open function only when the door key on the control panel is not working.
- ✓ The sample must be loaded weight-balanced way not to cause imbalance.
- ✓ The density of sample material must not exceed 1.2g/ml at Max. RPM or RCF.
- ✓ Any improper handling or any usage of un-qualified accessories is not able to be protected.

3. Technical Specifications

	GLO GT416
Max. RPM	4,000 rpm
Max. RCF	2,848 xg
Max. capacity	10ml x 4
Run time	≤ 99 min 59 sec or continuous
Noise level	≤ 60 dB
Acceleration time	≤ 20 sec
Deceleration time	≤ 25 sec
Program memory	10
Imbalance Recognition	Automatic
Motor	High torque AC induction motor
Safety	Lid-lock
Power & Frequency	AC 220-230V, 50/60Hz
Dimension (WxDxH) mm	375 x 480 x 260
Weight	19.5 Kg
CE Certification	Yes

4. Installation

4-1. Delivery Checklist

- 4-1-1. Main body, 1ea
- 4-1-2. Power cable, 1ea
- 4-1-3. Emergency door open tool, 1ea
- 4-1-4. User's manual, 1ea
- 4-1-5. Rotor 1 set
- 4-1-5. Rotor locking tool, 1ea

4-2. Unpacking the instrument

- 4-2-1. Open the box and lift out the instrument carefully together with the safety padding.
- 4-2-2. Remove the safety padding and vinyl wrap.
- 4-2-3. Place the instrument on the flat space.

4-3. Installation place

- 4-3-1. Install the machine at the solid and flat floor or table. If you place the centrifuge at the slope, the axis of rotation is possibly changed because of the rotor weight.
- 4-3-2. Install the machine about 30cm is departed from the wall because of the air circulation.
- 4-3-3. Install the machine at the place with appropriate temperature and humidity. It also has to be maintained with the proper temperature & humidity.
- 4-3-4. Install the machine at the place without any kinds of corrosive gases.

4-4. Supply the power

- 4-4-1. 416G model uses 110V or 220V. Check proper voltage of your instrument and connect to adequate power outlet.
- 4-4-2. If the power input is more than +/- 10% of the recommended voltage or fluctuating frequently, it may affect some functions of the instrument. It is advised to use AVR (Automatic Voltage Regulator).
- 4-4-3. If you want to use the instrument at other voltage range, please contact us.

* The instrument is delivered filling with protection padding inside the chamber. If you start operation without removing the protection padding, 'Error 9' is appeared because the rotor cannot rotate. In this case, open the door manually using the emergency door open function – refer to section 4-4-1 - and remove the protection padding. Mount the rotor and turn on again.

4-5. On/off and the door open

- 4-5-1. Turn on the instrument by pressing the switch on the right side of the machine.
- 4-5-2. Press the 'Door' button to open the door.
- 3-5-3. Remove the protection materials inside the chamber.

4-6. Rotor coupling and disassembling

- 4-6-1. Mount the rotor fitting with the motor shaft.
- 4-6-2. Grasp the rotor with one hand, and rotate the rotor nut in the direction of clockwise, until it is tightly assembled.
- 4-6-3. To disassemble the rotor, rotate the rotor nut in a counterclockwise direction.

5. Operation

5-1. Control Panel



- 5-1-1. Display FND: Shows the data of each function.
- 5-1-2. Up & down arrow: Uses to change input data.
- 5-1-3. Door: Uses to open the door.
- 5-1-4. RPM/RCF: Uses to switch the RPM/RCF display
- 5-1-5. TIME: Uses to set test time up to 99 min 59 sec (00: continuous)
- 5-1-6. START/STOP: Uses to start & stop operation.
- 5-1-7. PROG: Use to save a set of setting values or call the saved setting values.
- 5-1-8. SOFT START & STOP: Uses to accelerate or decelerate slowly.

*If you press the arrow button longer than 3 seconds, the numbers change very rapidly and the set-up is achieved faster.

5-2. Function Description

5-2-1. RPM

- ✓ Speed display unit : 10 rpm
- ✓ Speed setting unit : 10 rpm
- ✓ Speed accuracy : $\pm 2\%$ (at maximum speed)

- ① Press the 'RPM/RCF' button.
- ② Press the arrow button to change input value.

5-2-2. RCF (Relative Centrifugal Force)

- ✓ The conversion value from RPM to RCF is calculated automatically (based on the maximum radius and revolution)

- ① Press the 'RPM/RCF' button twice.
- ② Press the arrow button to change input value.

5-2-3. Time

- ✓ Time display: 99 min 59 sec, 2 digit display
- ✓ Time is down-counted after starting centrifugation.

① Press the 'TIME' button. The display shows the previous time value and the minute LED and value blinks.

② Press the arrow button to change the minute value.

③ Press the 'TIME' button again to set the second value, then the second LED and value blinks automatically.

④ Press the arrow button to change the second value.

* After finishing the setting, your input value is saved automatically in 2~3 seconds.

5-2-4. Soft Start & Stop

- ✓ For the sensitive samples not to disturb contents by fast acceleration and deceleration, use SOFT START/STOP. Centrifuge is accelerated or decelerated slowly. Press SOFT START / STOP button instead of 'START' button to use this function.

5-2-5. Program saving & recalling

- ✓ Use to save a set of setting values or call the saved setting values

[Saving or Editing]

① Press the 'PROG' button **longer than 2 seconds** for saving your preferred set of the test values.

② Check the message of "PROGRAM SAVE: ##" at the display, and any number of "##" blinks.

③ Press the arrow button and select a number between 01 ~10.

④ Press the **'Enter' button to complete the saving or editing.**

[Recalling]

① To retrieve the saved program, just press the 'PROG' **shortly**. Check the message of "PROGRAM CALL: ##" at the display. Choose the number with the arrow button, and then press the 'Enter' button.

5-2-6. Door

- ✓ Press the 'Door' button to open the door. The door is not opened while the instrument is running.

5-2-7. START / STOP

- ✓ Pressing the 'Start / Stop' button, the operation is started to run with setting or stopped to run in any case..

5-3. Operation Sequence

5-3-1. Connect the AC cord to the appropriate voltage.

5-3-2. Turn on the power switch located at the right side of the unit. Then the latest operating values are recalled with beeping sound.

5-3-3. Open the door and check the rotor.

5-3-4. Input the function values according to your preferences.

5-3-5. Press the 'START' button to start the operation.

5-3-6. As soon as the set-time is ended, the centrifugation will be ceased according to the set-deceleration level. If you want to interrupt before the set-time, press the 'STOP' button.

5-4. Miscellaneous Functions

5-4-1. In any cases needed for emergency open, you can use the emergency door open tool as long as the machine is idle. Insert the emergency tool into the emergency door open hole at the left-upside of the unit.

5-4-2. Imbalance Alarm: When the rotor is imbalanced and the vibration is severe, the operation is urgently stopped with the error message on the display and the alarming sound.

6. Maintenance

6-1. Outer part of instrument

6-1-1. Clean the outside of the machine with a dry soft cloth. If necessary, dip the cloth with neutral detergents and clean contaminated parts. Keep completely dry after cleaning.

6-1-2. Do not use any volatile chemicals such as alcohol, benzene, etc.

6-1-3. If any rust appears, clean with neutral detergents and dry it.

6-2. Inner part of instrument

6-2-1. Keep dry inside the chamber after every use of the machine.

6-2-2. Clean the shaft always for avoiding an imbalance during the rotation.

6-2-3. If any part is contaminated, clean with neutral detergents.

6-3. Rotor

6-3-1. Clean the rotor if any parts are contaminated with samples.

6-3-2. Keep dry after usage.

6-4. Moving or shipping of instrument

6-4-1. If you need to move or ship the instrument, be cautious to protect the shaft from any physical impact.

6-4-2. Remove the rotor and fill inside the chamber with proper materials to keep the shaft on place.

6-4-3. It is recommended to move or ship rotors separately if no original safety padding is available.

7. Trouble Shooting

Error	Possible Causes	Actions
E 1	Failure to reach to 200RPM within 2sec.	- Check the RPM sensor. - Check the connection of a RPM connector or a wire.*
E 2	When running, the door is opened.	- Check the door latch. - Stop running, power off and on.
E 3	Over temperature of motor.	- Check the motor temperature.
E 4	Low voltage	- Check supply voltage. - Use AVR to provide proper voltage.
E 5	High voltage	- Check supply voltage. - Use AVR to provide proper voltage.
E 6	Over speed	- Stop running, power off and on. - Tuning of the firmware(Download)*
E 7	Failure of control system	- Stop running, power off and on. - Tuning of the firmware(Download)*
E 8	Imbalance	- Check amount of samples. - Check weight-balances of samples.
E 9	RPM sensor recognition error	- Check attached place of RPM sensor. - Check connection of cable for RPM sensor. - Change RPM sensor.

* Any wire disconnection or tuning of the instrument must be performed only by a service engineer who is authorized by Glotech Co., Ltd.

8. Ordering Information

Cat No.	Product Description	Capacity
G1 7514 201	GLO GT416 Main Body, without Rotor	
Rotors & Accessories for GLO GT416		
T1 111 010	Swing Rotor, GRS-10-4, includes 4 Buckets, GLB-10	4 x 10 mℓ
T1 111 090	Bucket, GLB-10, 10 mℓ	